




MILESTONE

EMV – External Milestone Viewer
OPC Server Milestone



When to use EMV and OPC-Milestone?

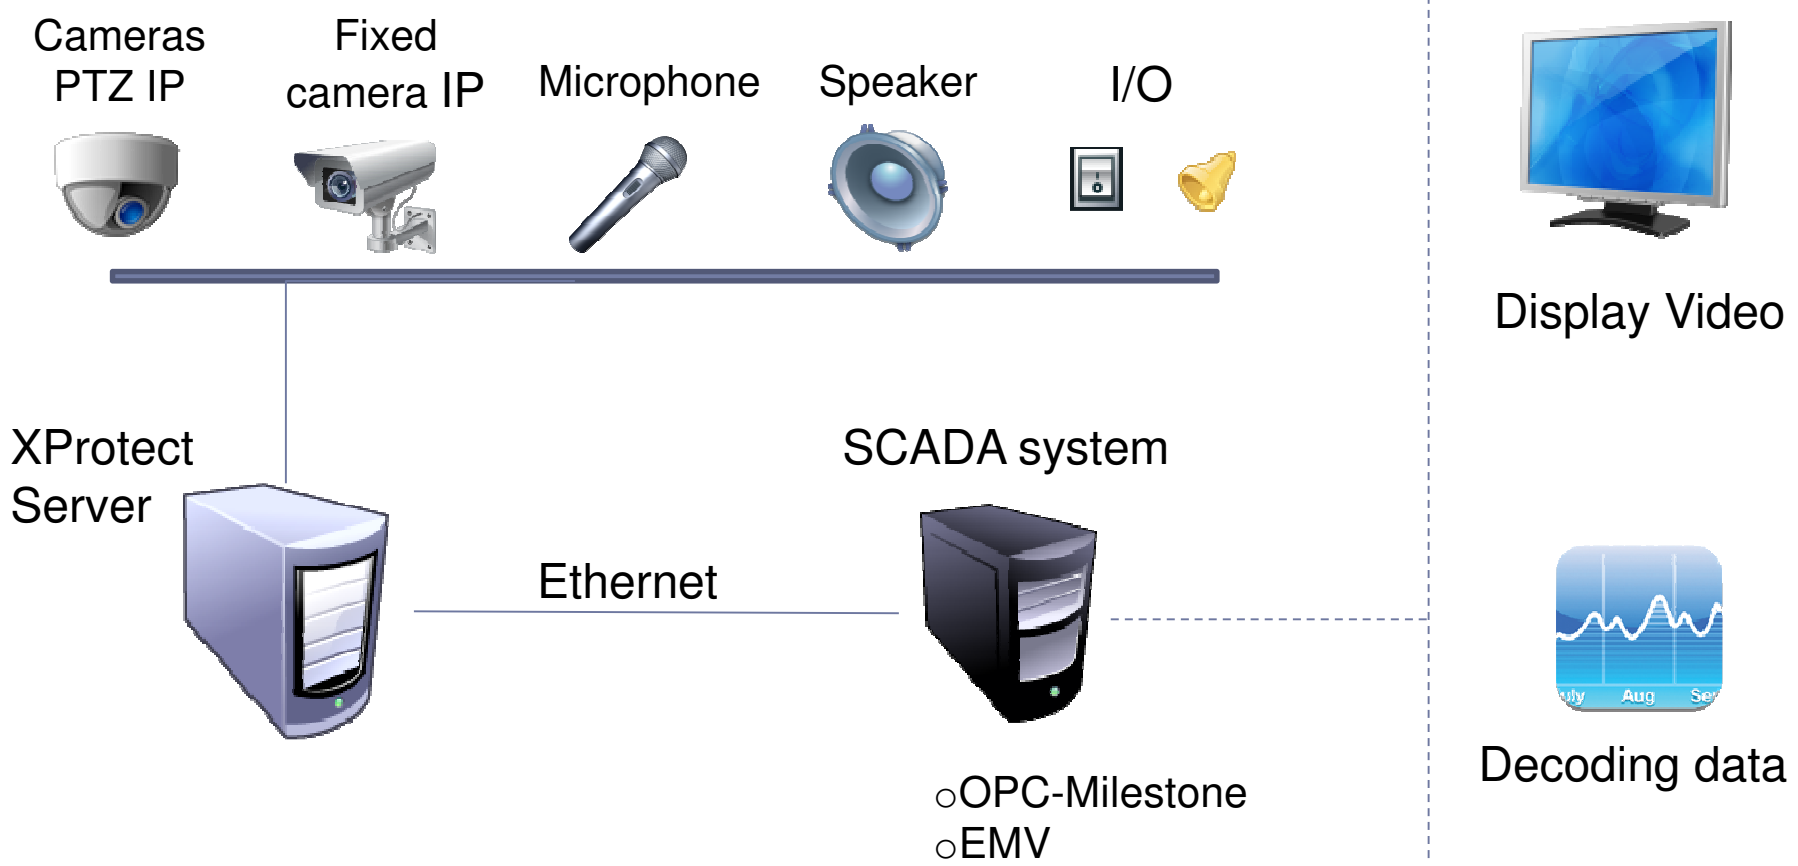



Why OPC-Server?



Native data transmission in standard format

Easy way to configure

Effective/efficient tool for the exchange of information among different systems

Client/Server architecture

Data in real time



OPC-Milestone



- OPC server DA (Data-Access)
- Translation Server Milestone status

	Corporate	Enterprise
Configured devices detection	✓	✓
Server connection Status	✓	✓
Cameras: connection status, Motion Detector	✓	✓
Cameras: Recording, PTZ manual session	✓	
Camera Commands: Start/Stop recording	✓	
Speakers, Microphones: connection status	✓	
I/O: connection status, device status	✓	
Output Commands: Activate/Deactivate	✓	



External Milestone Viewer EMV



- Viewer video stream cameras connected to the Milestone server

Characteristics:

- Activation from the command line
- Selection image quality
- Audio Management
- PTZ commands and preset